

## OfficeSmart® Nature Series Antistatic LVT Flooring

### MAINTENANCE GUIDELINES

When performing any wet maintenance, always use wet floor signs.

#### Installed Floor Care

- Use 1/4" or thicker plywood to protect flooring surface when moving heavy objects across the new floor.
- Lightly damp mop floor as needed.

#### Initial Maintenance

- Sweep, vacuum or dust mop to remove dirt and grit.
- If needed, add neutral cleaner to cool water following the manufacturer's instructions.
- Scrub with a low-rpm machine or auto scrubber. Use a red pad or brush.
- Never use brown or black pads, which can damage the product.
- Remove the cleaning solution with a wet-dry vacuum or auto scrubber until the floor is dry.
- Rinse the floor with clean water. Repeat the rinse process if necessary to removal all haze.

#### Routine Maintenance

- Sweep, vacuum or dust mop to remove dirt and grit.
- Add neutral pH cleaner to cool water following the manufacturer's instructions.
- As needed, scrub with a low-rpm machine or auto scrubber to retain appearance. Use a neutral cleaner following the manufacturer's instructions.

#### Preventative Floor Care

- Use walk-off mats that are as wide as the doorway and long enough for soil load and weather conditions.
- Use mats with a non-staining backing.
- Floor protectors should be used on all furniture legs.
- The surface area of the floor protectors should be no less than 1" in diameter.
- Waxes and Polishes of any kind are NOT recommended.

### QUESTIONS/ASSISTANCE

For technical assistance or questions about installing or maintaining your OfficeSmart® Nature Series LVT flooring, please contact our Customer Support desk at (978) 276-0820, Monday through Friday 8:30am -4:30pm EST. Our Technical Support Department can be reached by E-mail at [techsupport@julieind.com](mailto:techsupport@julieind.com).